

2009 **VERSA**

QUICK REFERENCE GUIDE



SHIFT_value



- | | | | | | | | |
|-----------|-----------------------------------|-----------|---|-----------|--------------------------------------|-----------|--|
| 01 | LOW TIRE PRESSURE WARNING LIGHT | 05 | STEERING WHEEL SWITCHES FOR AUDIO CONTROL AND BLUETOOTH® CRUISE CONTROL | 09 | OUTSIDE MIRROR CONTROL SWITCH* | 13 | AUDIO SYSTEM |
| 02 | TWIN TRIP ODOMETER | 06 | STEERING WHEEL TILT ADJUSTMENT* | 10 | FUEL-FILLER DOOR RELEASE* | 14 | AUXILIARY INPUT JACK* (if so equipped) |
| 03 | HEADLIGHT AND TURN SIGNAL CONTROL | 07 | INSTRUMENT BRIGHTNESS CONTROL* | 11 | HOOD RELEASE* | 15 | MANUAL CLIMATE CONTROL |
| 04 | WINDSHIELD WIPER/WASHER SWITCH | | | 12 | FRONT PASSENGER AIR BAG STATUS LIGHT | | |

*See your Owner's Manual for more information.

TABLE OF CONTENTS

Remote Keyless Entry System (if so equipped)2
NISSAN Intelligent Key™ (if so equipped)2
Automatic Door Locks (if so equipped)3
Windshield Wiper/Washer Switch4
Headlight and Turn Signal Control4
Steering Wheel Switches for Audio Control/Bluetooth® (if so equipped)5
Cruise Control (if so equipped)5
Manual Climate Control6
FM/AM/XM®* Radio with CD Changer (if so equipped).7
Clock Set/Adjustment9
Twin Trip Odometer9
4-Speed Automatic Transmission (if so equipped)9
Continuously Variable Transmission (CVT) (if so equipped).10
5-Speed Manual Transmission (if so equipped).10
6-Speed Manual Transmission (if so equipped).11
NISSAN Intelligent Key™ Ignition With Manual Transmission11
High and Low Temperature Indicator11
Front Passenger Air Bag Status Light12
Tire Pressure Monitoring System (TPMS)12
Seat Belt Warning Light and Chime12
Child Safety Rear Door Lock13
Moonroof Controls (if so equipped)13
Interior Light13
Front Seat Adjustments14
Rear Seat Adjustments14
Bluetooth® Hands-Free Phone System (if so equipped).15

This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)




LOCK DOORS

Press the  button to lock all doors.




UNLOCK DOORS


 


Press the  button once to unlock the driver's door only. Press the button again within 5 seconds to unlock all doors.



USING THE PANIC ALARM

Press and hold the  button for longer than 0.5 seconds. The panic alarm will sound and the headlights will stay on for 25 seconds. The panic alarm stops when it has run for 25 seconds or when any button is pressed on the keyfob.

SILENCING THE HORN BEEP FEATURE

 
- To deactivate: Press and hold the  and  buttons for at least 2 seconds.
- To activate: Press and hold the  and  buttons for at least 2 seconds.

NISSAN INTELLIGENT KEY™ (if so equipped)

The NISSAN Intelligent Key™ allows you to lock or unlock your vehicle, open your trunk or rear hatch, and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the door and hatchback/trunk lock/unlock function is approximately 31 in (0.8 m).
- Locking the vehicle - Push any door handle Request Switch **01** once.
- Unlocking the vehicle - Push any door handle Request Switch **01** once. The corresponding door will unlock. Push the door handle Request Switch **01** again within 1 minute; all other doors will unlock.

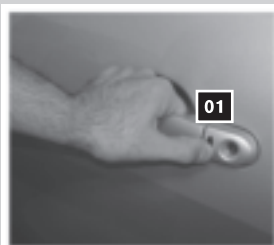

OPENING THE REAR HATCH (if so equipped)

- Push the rear hatch door Request Switch **02** .
- Push the release switch **03** under the rear hatch handle.
- Pull up and out on the handle to open the rear hatch.



OPENING THE TRUNK (if so equipped)



- Push the trunk Request Switch **02** .
- Push the release switch **03** under the trunk handle.
- Pull up and out on the handle to open the trunk.



AUTOMATIC DOOR LOCKS (if so equipped)

- All doors lock automatically when the vehicle speed reaches 15 MPH (24 km/h).
- All doors unlock automatically when the ignition is placed in the OFF position (Intelligent Key equipped vehicles) or when the key is removed from the ignition switch (mechanical key equipped vehicles).

The automatic lock and unlock functions can be deactivated or activated independently of each other. To deactivate or activate the automatic door lock or unlock system, perform the following procedure:

1. Close all doors.
2. Place the ignition switch in the ON position.
3. Do one of the following within 20 seconds of performing Step #2:
 - To change AUTO UNLOCK settings: push and hold the power door lock switch to the  position (UNLOCK) for more than 5 seconds.
 - To change AUTO LOCK settings: push and hold the power door lock switch to the  position (LOCK) for more than 5 seconds.
4. When activated, the hazard indicator will flash twice. When deactivated, the hazard indicator will flash once.
5. The ignition switch must be placed in the OFF and ON position again between each setting change.

WINDSHIELD WIPER/WASHER SWITCH

- The ignition switch must be in the ON position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:

1A Intermittent (**INT**) – Front wipers operate intermittently and can be further adjusted by twisting the time control ring **1B**.

 
02 Low Speed (**LO**) – Continuous low-speed operation of front wipers.

03 High Speed (**HI**) – Continuous high-speed operation of front wipers.

04 Mist (**MIST**) – Lift the lever up for one sweep of the front wipers.

05 Rear Wiper (**REAR**) (if so equipped) – Twist the end section to operate the first (**INT**) or second (**ON**) speed settings for the rear wipers.


- Pull the lever toward you to activate front washer fluid and several sweeps of the wipers.

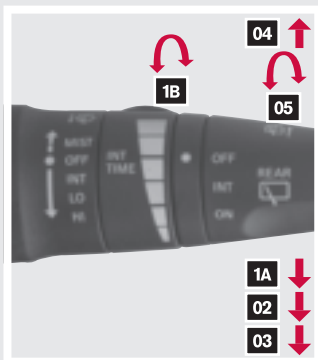

HEADLIGHT AND TURN SIGNAL CONTROL

HEADLIGHT CONTROL SWITCH

 - Turn the headlight control switch **01** to the $\text{☞} \text{☜}$ position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the headlight control switch **01** to the ☞ position to turn on the headlights. All other lights remain on.

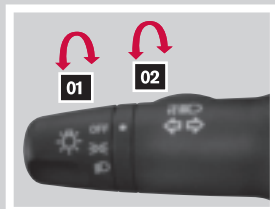


FOG LIGHT OPERATION (if so equipped)

NOTE: The headlights must be on and the low beams selected for the fog lights to operate.

- Turn the switch (inside collar) **02** to the $\text{☞} \text{☜}$ position to turn on the fog lights.
- Turn the switch (inside collar) **02** to the **OFF** position to turn off the fog lights.

HIGH BEAM

 - Push the headlight control switch forward **A** to select the high beam function. The blue ☞ indicator light illuminates. Pull the headlight switch back to the original position to select the low beam. The blue ☞ indicator light goes off.

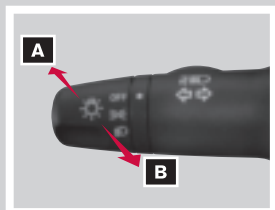

- Pull and release the headlight control switch **B** to flash the headlight high beams on and off.

STEERING WHEEL SWITCHES FOR AUDIO CONTROL/ BLUETOOTH® (if so equipped)

- Press the **SOURCE** button to turn the audio system on.
- To choose Preset A, B, C, CD or XM® (if so equipped) press **SOURCE** repeatedly.
- The tuning up or down \blacktriangle switch can be used to perform the following:
 - Push the \blacktriangle switch for less than 1.5 seconds to change to a preset station.
 - Push and hold the \blacktriangle switch for more than 1.5 seconds to seek the next or previous broadcasting radio station.
 - Push the \blacktriangle switch while playing a CD (if so equipped) for less than 1.5 seconds to change tracks on the CD.
 - If the vehicle is equipped with a CD changer, push and hold the \blacktriangle switch for more than 1.5 seconds to change between CDs.
- Push the **+** or **-** control switch to increase or decrease the volume.



CRUISE CONTROL (if so equipped)

- To activate the cruise control, push the **ON/OFF** switch. The indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch and release it. The SET indicator light in the instrument panel will illuminate.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch. When the vehicle attains the speed you desire, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch. Release the switch when the vehicle slows to the desired speed.
- To cancel cruise control, push the **CANCEL** switch or tap the brake pedal. The SET indicator light in the instrument panel will go out.
- To resume a preset speed, push and release the **ACCEL/RES** switch. The vehicle returns to the last set cruising speed when the vehicle speed is over 24 MPH (38 km/h).
- To turn off cruise control, push the **ON/OFF** switch. Both the CRUISE indicator light and the SET indicator light in the instrument panel will go out.





MANUAL CLIMATE CONTROL

01 FAN SPEED CONTROL DIAL





 
Turn the fan speed control dial  to the left (slow) or right (fast) to control fan speed.

02 TEMPERATURE CONTROL DIAL



Turn the temperature control dial to select the desired temperature. Turn the control dial to the left for cold air or right for hot air.

03 AIR FLOW CONTROL DIAL


Turn the dial to select the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side, and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.
-  Air flows mainly from the defroster vents.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Move the air intake lever **07** to the  left position for fresh air.
- Turn the air flow control dial **03** to the front window defroster mode .
- Turn the temperature control dial **02** left or right to set the desired temperature.
- To set the defroster on high, turn both the fan speed control dial **01** and the temperature control **02** all the way to the right.
- The A/C will automatically turn on for enhanced defrost/defog performance. The A/C indicator light will not illuminate.




05 REAR WINDOW DEFROSTER

 
Push the rear window defroster switch  on. Push the switch again to manually turn the defroster off. This function automatically turns off after approximately 15 minutes.

06 A/C ON/OFF BUTTON (if so equipped)

Press the **A/C** button to manually turn the A/C on or off.

07 AIR INTAKE LEVER

- Move the air intake lever to the  position to draw in fresh outside air.
- Move the air intake lever to the  position to recirculate air inside the vehicle.
- Move the air intake lever to the  position for maximum cooling when using the air conditioner (if so equipped).

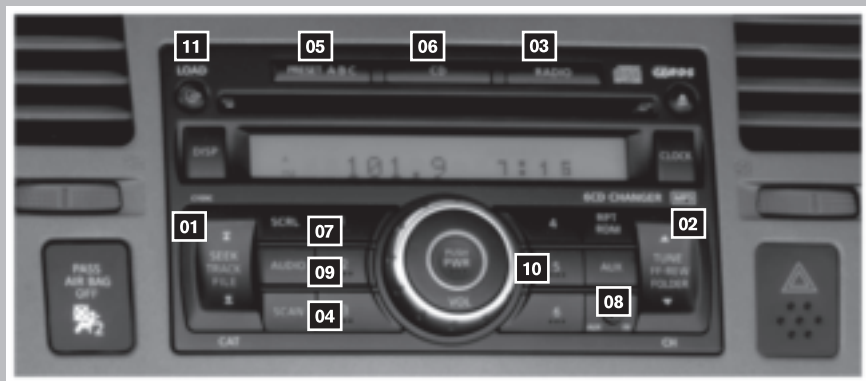

FM/AM/XM®* RADIO WITH CD CHANGER (if so equipped)

The antenna should be placed in the rearward position for maximum radio reception.

01 SEEK/TRACK/FILE BUTTON

Press the **SEEK/TRACK/FILE** button to skip from one track to another on a CD. Each time the button is pressed, the CD will advance or skip back one track.

02 TUNE/FF-REW/FOLDER BUTTON

Press the **TUNE/FF-REW/FOLDER** button to manually tune the radio. If playing a CD, press to fast forward or rewind a CD. If playing a CD that is formatted for MP3s, press the **TUNE/FF-REW/FOLDER** button to skip folders. Press and hold the button to fast forward or rewind an MP3 CD.

03 RADIO BUTTON

Press the **RADIO** select button to change the band to either FM, AM or XM® radio stations.

04 SCAN BUTTON

Press the **SCAN** button to quickly scan through each broadcasting station. The tuner will pause for 5 seconds on each broadcasting station.

05 PRESET A-B-C BUTTON

Press the **PRESET A-B-C** button until you reach the desired setting. The radio is equipped with three separate banks, each with six station presets. You may store any combination of FM, AM or XM® radio presets in each bank.

06 CD PLAY BUTTON

Press the **CD** button to begin CD play.

07 SCROLL BUTTON

Press the **SCRL** button to scroll through CD/MP3 text that is too long to be displayed on the first line of the display.

08 AUX BUTTON

Press the **AUX** button to play a compatible device such as an MP3 player when it is plugged into the **AUX IN** jack.

09 AUDIO BUTTON

Press the **AUDIO** button to change the audio settings. Adjust the bass, treble, balance, fade and Speed Sensitive Volume (SSV) and beep on/off by pressing the **AUDIO** button until the desired mode appears in the display. Press the **TUNE/FF-REW/FOLDER** button up or down to adjust to the desired level.

10 STATION AND CD SELECT BUTTONS

- To store a station in a preset you must first select the A, B or C memory bank by pressing the **PRESET A-B-C** button and tune to the desired FM, AM or XM® station. Then press and hold the desired station select button for at least 2 seconds. When the preset indicator illuminates, a beep will sound, indicating memorization is complete. To retrieve a previously set station, select the memory bank where the preset was set, then press the corresponding station select button.
- While playing a CD, press one of the CD select buttons (**1 - 6**) to select a different CD loaded into the CD changer.

11 LOAD BUTTON

LOAD A SINGLE DISC Press the **LOAD** button for less than 1.5 seconds. Select the loading slot by pressing the CD insert button (**1 - 6**), then insert the CD.

LOAD UP TO 6 DISCS Press and hold the **LOAD** button for more than 1.5 seconds. The slot numbers (**1 - 6**) will illuminate on the display when the CDs are loaded into the charger.

*XM® Satellite Radio is only available on vehicles equipped with optional XM® satellite subscription service.

CLOCK SET/ADJUSTMENT

CD CHANGER ONLY

Pressing the **CLOCK** button displays the clock with the radio on or off. Press the **CLOCK** button again to turn off the clock display. To set the clock:



1. Press and hold the **CLOCK** button for more than 1.5 seconds to enter the clock set mode.
2. Press the **SEEK/TRACK/FILE** button to adjust the hour.
3. Press the **TUNE/FF-REW/FOLDER** button to adjust the minute.
4. Press the **CLOCK** button again to exit the clock set mode.

TWIN TRIP ODOMETER

- The twin trip odometer records the distance of individual trips.
- Press the button **01** to change the display as follows: Trip A → Trip B → Trip A.
- Press and hold the button **01** for more than 1 second to reset the currently displayed trip odometer to zero.



4-SPEED AUTOMATIC TRANSMISSION (if so equipped)

- The 4-speed automatic transmission is electronically controlled to produce maximum power and smooth operation.
- The automatic transmission in your vehicle is designed so that the brake pedal must be depressed before shifting from P (Park) to any gear position while the ignition switch is in the ON position.
- The shift selector cannot be moved out of P (Park) and into any of the other gear positions if the ignition key is turned to the LOCK position or if the key is removed.



CONTINUOUSLY VARIABLE TRANSMISSION (CVT) (if so equipped)

- The CVT does not produce a gear change sensation like traditional automatic transmissions.
- R (Reverse) speed for CVT vehicles is limited to 15 MPH (25 km/h).

The transmission in your vehicle requires a special fluid available only at your NISSAN dealer. No other fluid will meet the exact requirements of the CVT.

STARTING THE ENGINE WITH CVT (NISSAN Intelligent Key™ models only)

- Depress the brake pedal.
- Push the ignition knob in.
- Confirm the Intelligent Key system warning light is illuminated green.
- Turn the ignition knob to start the engine.



TURNING THE ENGINE OFF WITH CVT (NISSAN Intelligent Key™ models only)

- Shift the shift selector into the P (Park) position.
- Turn the ignition knob to the LOCK position.

OVERDRIVE (O/D) OFF SWITCH

- Each time your vehicle is started, the CVT is automatically “reset” to Overdrive on.
- To turn Overdrive mode off, push the O/D OFF switch **01**. The ^{O/D}OFF light in the instrument panel will illuminate.
- Use the Overdrive off mode when you need improved engine braking.

5-SPEED MANUAL TRANSMISSION (if so equipped)

To change gears, depress the clutch pedal fully and shift into the appropriate gear, then release the clutch pedal slowly.

 
- Start the vehicle in 1st gear and shift into 2nd, 3rd, 4th and 5th gear according to the vehicle speed.
- On the 5-speed manual transmission, you cannot shift directly from 5th gear into R (Reverse). Stop the vehicle completely, Move the shift lever into the N (Neutral) position, then move it into the R (Reverse) position.



6-SPEED MANUAL TRANSMISSION (if so equipped)

LOCK OUT

- In 6-speed manual transmission equipped vehicles, the shift selector is equipped with a Reverse lock-out feature that prevents accidental selection of Reverse (instead of 1st gear).

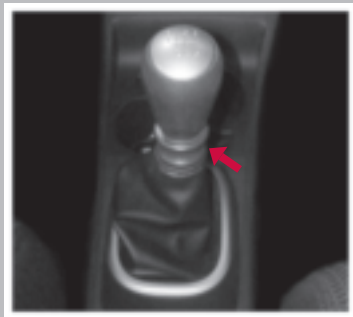

SHIFTING TO REVERSE

- Lift up on the collar just below the shift knob, then move the shift selector left and up into Reverse.

NISSAN INTELLIGENT KEY™ IGNITION WITH MANUAL TRANSMISSION

- The ignition knob can only be turned to the **LOCK** position when the **PUSH** release button **01** has been pressed.
- The NISSAN Intelligent Key™ lock warning light blinks in the instrument panel and the buzzer sounds when the ignition switch is turned to the **LOCK** position and the ignition **PUSH** release button **01** has not been completely pressed.



HIGH AND LOW TEMPERATURE INDICATOR

HIGH TEMPERATURE INDICATOR (Red)

When the ignition switch is in the ON position, the high temperature warning light illuminates and then turns off.





LOW TEMPERATURE INDICATOR (Blue)

When the ignition switch is in the ON position, the low temperature indicator light illuminates and then turns off after the engine coolant has warmed up.

FRONT PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the Nissan Advanced Air Bag System. Under some conditions, depending on the type of occupant or object detected in the front passenger seat by the occupant classification sensor, the front passenger air bag is designed to automatically turn **OFF**. When the front passenger air bag is **OFF**, the front passenger air bag status light will illuminate*. For example:



- When the system detects that the front passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the  **will illuminate** to indicate that the front passenger **air bag is OFF and will not inflate in a crash**.
- When the front passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the  **will not illuminate** to indicate that the front passenger **air bag is operational**.

***When the system detects that the front passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front passenger air bag is OFF.**

TIRE PRESSURE MONITORING SYSTEM (TPMS)

This system monitors tire pressure. If the low tire pressure warning light illuminates, check the tire pressure in all four tires.

Adjust the low tire pressure to the recommended COLD tire pressure shown on the Tire and Loading Information label located in the driver's door opening. After tire pressures are adjusted, the vehicle will need to be driven at speeds above 16 MPH (25 km/h) to activate the TPMS and turn off the low tire pressure warning light.



SEAT BELT WARNING LIGHT AND CHIME

- The light and chime remind you to fasten your seat belts. The light illuminates whenever the ignition switch is placed in the ON or START position and remains illuminated until the driver's seat belt is fastened. At the same time, the chime sounds for approximately 6 seconds unless the driver's seat belt is securely fastened.
- With the ignition ON, the seat belt warning light may also illuminate if the front passenger's seat is occupied with the front passenger's seat belt not fastened.



CHILD SAFETY REAR DOOR LOCK

 
 
- The child safety lock levers are located on the edge of the rear doors.
- Child safety locks help prevent the rear doors from being opened accidentally, especially when small children are in the vehicle.
- When the lever is in the LOCK position, the door can only be opened from the outside.



MOONROOF CONTROLS (if so equipped)



The ignition switch must be in the ON position to operate the moonroof.

TILTING THE MOONROOF

- To tilt the moonroof up, push the tilt switch toward the  **01** position.
- To tilt the moonroof down, push the tilt switch toward the  **02** position.



  SLIDING THE MOONROOF

- To fully open the moonroof, push the switch toward the  **02** position.
- To fully close the moonroof, push the switch toward the  **01** position.
- To open or close the moonroof part way, push the switch in either direction (**01** or **02**) while the moonroof is sliding to stop it in the desired position.

INTERIOR LIGHT

- Push the switch to the ON position **01**. The interior lights illuminate regardless of door position.
- Push the switch to the OFF position **02**. The interior lights will not illuminate regardless of door position.
- Push the switch to the DOOR position **03**. The interior lights will stay on for approximately 30 seconds when:
 - The doors are unlocked by a keyfob, key or power door lock switch while all doors are closed and ignition is in the OFF position.
 - The driver's door is opened and then closed with the key removed from the ignition.
 - The key is removed from the ignition and all doors are closed.



 
FRONT SEAT ADJUSTMENTS

WITH MANUAL SEATS

- Pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- Lift the lever **02** on the side of the seat to adjust your seatback forward or backward; release the lever when you have found a comfortable angle and the seat belt fits properly.

Seat lifter (driver's seat, if so equipped)

- Pull up or push down the adjusting lever **03** repeatedly to adjust the seat height.

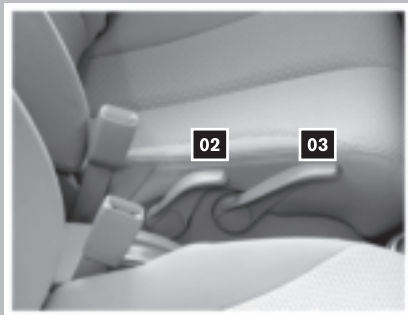


REAR SEAT ADJUSTMENTS

FOLDING DOWN THE REAR SEATS (if so equipped)

Either side of the seatback (or both) can be folded and has its own release.

 - Pull the release **01** on the top of the seatback to fold the rear seat down.

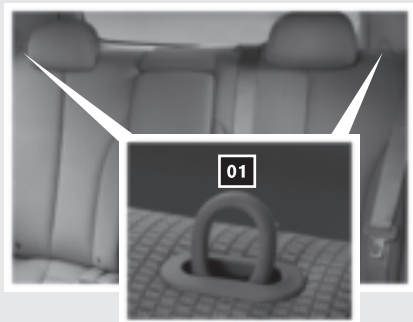



BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth® Hands-Free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

Bluetooth® controls location



SYSTEM OPERATING TIPS


- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- To go back to the previous command, say “Go back” or “Correction.”
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit,” or press the  button.
- To increase or decrease the volume of the voice prompts, press the + or – (volume) control buttons on the steering wheel or turn the volume knob on the audio system while the system is responding.
- Speak in a clear and natural voice without pausing between words.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. Refer to your Owner’s Manual for a list of commands and further instructions.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used in any menu to hear a list of available commands.
- Please refer to the cellular phone manufacturer’s Owner’s Manual for detailed information regarding your Bluetooth® phone.
- **For recommended phones and detailed instructions, please visit www.nissanusa.com/bluetooth .**

PAIRING YOUR PHONE

To use the hands-free feature, you need to set-up, or pair, the system to recognize your compatible cellular phone(s). Five Bluetooth®-enabled phones can be paired. After set-up, the system automatically connects with a paired phone when the ignition is in the ACC or ON position, as long as the phone is on and in the vehicle.

PAIRING PROCEDURE

NOTE: The vehicle must be stationary when pairing the phone.


1. Press the  button on the steering wheel and wait for the tone.
2. Say “Setup”.

3. Wait for the tone, then say "Pair phone".
4. Wait for the tone, then say "New phone".
5. Initiate pairing from the phone.
 - The pairing procedure varies according to each cellular phone model. For detailed pairing instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PASSKEY code, enter "1234" from the handset. (The PASSKEY code is assigned by NISSAN and cannot be changed.)
6. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.
7. Say a number between 1 and 5 when the system asks you for a priority level. The priority level determines which phone interacts with the system when two or more paired phones are active in the vehicle at the same time. Choose 1 if this is the only phone or the primary phone.
8. Say "Yes" or "No" when the system asks if you would like to select a custom ring tone. Follow the instructions provided by the system to choose a ring tone.

SETTING UP YOUR PHONEBOOK – ADDING NEW ENTRIES


Each paired phone has its own dedicated phonebook. Each phonebook can store up to 40 names. Each name can have up to 4 locations/numbers: Home, Office, Mobile, and Other.

NOTE: The vehicle must be stationary when adding new entries.

1. Press the  button and wait for the tone.
2. Say "Phonebook".
3. Wait for the tone, then say "New entry".
4. When prompted, say the name for the new entry. For example, say "Michelle". If the name is too short or too long, or if it sounds too much like a name that is already stored in the phonebook, the system tells you and prompts you to say a name again. Choose a new name.
5. Say "Yes" or "No" when the system asks you to confirm the name is correct.
6. Say a location ("Home," "Office," "Mobile" or "Other") when the system asks you to provide one. The system acknowledges the location.
 - By Voice command - When prompted, say a phone number for the location. For example, say "five five five one two one two". The system repeats the number and prompts you for the next command.
 - By Bluetooth® transfer - Say "Transfer entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone via the Bluetooth® communication link. The transfer procedure varies according to each cellular phone. See the cellular phone owner's manual for details.
7. Say "Store" when you are finished entering numbers. The system confirms the name, location, and number.




8. Say "Yes" or "No" when the system asks if you would like to store another location for the same name. If you do not respond to the system prompt, the system ends the New Entry session.

MAKING A PHONE CALL

1. Press the  button.
2. After the tone, do one of the following:
 - Say "Call [name] [location]". For example, say "Call Michelle Home".
 - Say "Call [number]". For example, say "Call 123-456-7891".
 - Say "Redial" to redial the previous phone number called by the system.
 - Say "Call International" to dial more than 10 digits or any special characters.

RECEIVING/ENDING A PHONE CALL

When you receive a phone call, a ring tone sounds through the audio system.

- To accept the call, press the  button. To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

HOW TO SAY NUMBERS

NISSAN voice recognition permits numbers to be spoken in a variety of ways.

- Say "zero" or "oh" for "0". Example: 1-800-662-6200 – Say "one eight zero zero six six two six two oh oh".
- Say "pound" for "#". Say "star" for "*" (available when using the "Call International" command, and the "Send" command during a call).
- Say "plus" for "+" (available only when using the "Call International" command).
- Say "pause" for a 2-second pause (available only when storing a phonebook number).



Nissan, the Nissan Brand Symbol, "SHIFT_" tagline, Z and Nissan model names are Nissan trademarks.

© 2008 Nissan North America, Inc.

QR9E-0C11U2

Printing: September 2008 (07)